

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

for the measurement of electrical variables in heavy-current power system



Application

SINEAX DME 406 (Fig. 1) is a programmable transducer with a PROFIBUS-DP connection that simultaneously measures all variables of a heavy-current power system.

The device conforms to the PROFIBUS standard EN 50 170. The PROFIBUS is an open field-bus standard independent of manufacturers with a wide range of applications. The PROFIBUS supports the communication of devices from different manufacturers without special adaptations to the interface.

The transducers are also equipped with an **RS 232** serial interface to which a PC with the corresponding software can be connected for programming or accessing and executing useful ancillary functions.

The usual methods of connection, the rated values of the input variables and the type of internal energy metering are the main parameters that can be programmed.

The ancillary functions include a power system check, a facility for printing rating labels and provision for reading and setting the power meter.

The transducer fulfils all the essential requirements and regulations concerning electromagnetic compatibility (**EMC**) and **Safety** (IEC 1010 resp. EN 61 010). It was developed and is manufactured and tested in strict accordance with the **quality assurance standard ISO 9001**.

Features / Benefits

- Communication capability via PROFIBUS-DP or RS232 C interface
- Measurement of current, voltage and active, reactive and apparent power, power factor, frequency and energy, as well as special current functions (bimetal, slave pointer and signed or unsigned average value)
- Accuracy class 0.2
- Adjustable conversion factor for current and voltage transducers
- Up to 4 integrated energy meters, storage every each 203 s, storage for 20 years
- Windows software with password protection for programming, data analysis, power system status simulation, acquisition of meter data and making settings
- Power supply DC or AC with a very large voltage range, or AC power supply/universally applicable
- Provision for either snapping the transducer onto top-hat rails or securing it with screws to a wall or panel

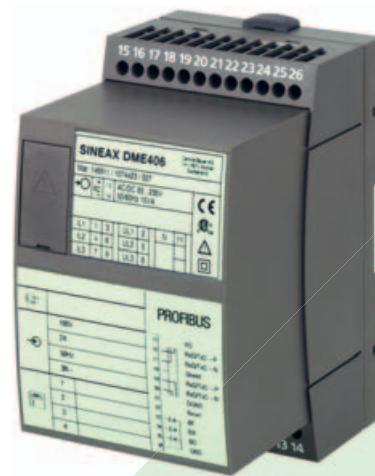
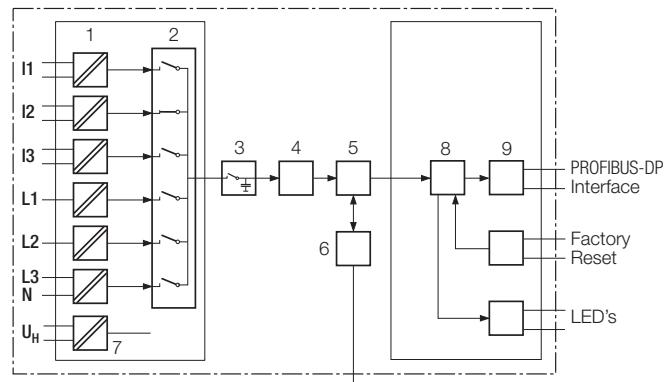


Fig. 1. SINEAX DME 406 in housing **T24**,
clipped onto a top-hat rail.

Measured variables	Output	Types
	Profibus DP	DME 406
Current, voltage (rms), active/reactive/apparent power cosφ, sinφ, power factor RMS value of the current with wire setting range (bimetal measuring function)	Without analog outputs, with bus RS 485 (MODBUS) see data sheet DME 401-1 Le	DME 401
Slave pointer function for the measurement of the RMS value IB Frequency Average value of the currents with sign of the active power (power system only)	4 analog outputs and bus RS 485 (MODBUS) see data sheet DME 440-1 Le	DME 440
	2 analog outputs and 4 digital outputs or 4 analog outputs and 2 digital outputs see data sheet DME 424/442-1 Le	DME 424
	Data bus LON see data sheet DME 400-1 Le	DME 400

SINEAX DME 406 with PROFIBUS-DP

Programmable Multi-Transducer



1 = Input transformer
 2 = Multiplexer
 3 = Latching stage
 4 = A/D and D/A converter
 5 = Microprocessor

6 = Programming interface
 RS-232 (electrically insulated)
 7 = Power supply
 8 = Microprocessor
 9 = SPC 4

Fig. 2. Block diagram.

Symbols

Symbols	Meaning
X	Measured variable
X0	Lower limit of the measured variable
X1	Break point of the measured variable
X2	Upper limit of the measured variable
U	Input voltage
Ur	Rated value of the input voltage
U ₁₂	Phase-to-phase voltage L1 – L2
U ₂₃	Phase-to-phase voltage L2 – L3
U ₃₁	Phase-to-phase voltage L3 – L1
U _{1N}	Phase-to-neutral voltage L1 – N
U _{2N}	Phase-to-neutral voltage L2 – N
U _{3N}	Phase-to-neutral voltage L3 – N
U _M	Average value of the voltages (U _{1N} + U _{2N} + U _{3N}) / 3
I	Input current
I ₁	AC current L1
I ₂	AC current L2
I ₃	AC current L3
I _r	Rated value of the input current
I _M	Average value of the currents (I ₁ + I ₂ + I ₃) / 3
I _{MS}	Average value of the currents and sign of the active power (P)

Symbols	Meaning
IB	RMS value of the current with wire setting range (bimetal measuring function)
BS	Slave pointer function for the measurement of the RMS value IB
φ	Phase-shift between current and voltage
F	Frequency of the input variable
P	Active power of the system $P = P_1 + P_2 + P_3$
P ₁	Active power phase 1 (phase-to-neutral L1 – N)
P ₂	Active power phase 2 (phase-to-neutral L2 – N)
P ₃	Active power phase 3 (phase-to-neutral L3 – N)
Q	Reactive power of the system $Q = Q_1 + Q_2 + Q_3$
Q ₁	Reactive power phase 1 (phase-to-neutral L1 – N)
Q ₂	Reactive power phase 2 (phase-to-neutral L2 – N)
Q ₃	Reactive power phase 3 (phase-to-neutral L3 – N)
S	Apparent power of the system $S = \sqrt{I_1^2 + I_2^2 + I_3^2} \cdot \sqrt{U_1^2 + U_2^2 + U_3^2}$
S ₁	Apparent power phase 1 (phase-to-neutral L1 – N)
S ₂	Apparent power phase 2 (phase-to-neutral L2 – N)
S ₃	Apparent power phase 3 (phase-to-neutral L3 – N)
S _r	Rated value of the apparent power of the system
PF	Active power factor $\cos\phi = P/S$
PF ₁	Active power factor phase 1 P_1/S_1
PF ₂	Active power factor phase 2 P_2/S_2
PF ₃	Active power factor phase 3 P_3/S_3
QF	Reactive power factor $\sin\phi = Q/S$
QF ₁	Reactive power factor phase 1 Q_1/S_1
QF ₂	Reactive power factor phase 2 Q_2/S_2
QF ₃	Reactive power factor phase 3 Q_3/S_3
LF	Power factor of the system $LF = \operatorname{sgn}Q \cdot (1 - PF)$
LF ₁	Power factor phase 1 $1 - \operatorname{sgn}Q_1 \cdot PF_1 $
LF ₂	Power factor phase 2 $1 - \operatorname{sgn}Q_2 \cdot PF_2 $
LF ₃	Power factor phase 3 $1 - \operatorname{sgn}Q_3 \cdot PF_3 $
H	Power supply
H _n	Rated value of the power supply1

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

Applicable standards and regulations

IEC 688 resp. EN 60 688	Electrical measuring transducers for converting AC electrical variables into analog and digital signals
IEC 1010 resp. EN 61 010	Safety regulations for electrical measuring control and laboratory equipment
IEC 529 resp. EN 60529	Protection types by case (code IP)
IEC 255-4 Part. E5	High-frequency disturbance test (static relays only)
IEC 1000-4-2, 3, 4, 6	Electromagnetic compatibility for industrial process measurement and control equipment
EN 55 011	Electromagnetic compatibility of data processing and telecommunication equipment Limits and measuring principles for radio interference and information equipment
IEC 68-2-1, 2, 3, 6, 27 resp. EN 60 068-2-1, 2, 3, 6, 27	Ambient tests -1 Cold, -2 Dry heat, -3 Damp heat, -6 Vibration, -27 Shock
DIN 40 110	AC quantities
DIN 43 807	Terminal markings
IEC 1036	Alternating current static watt-hour meters for active energy (classes 1 and 2)
UL 94	Tests for flammability of plastic materials for parts in devices and appliances

Continuous thermal ratings of inputs

Current circuit	10 A	400 V single-phase AC system
		693 V three-phase system
Voltage circuit	480 V	single-phase AC system
	831 V	three-phase system

Short-time thermal rating of inputs

input variable	Number of inputs	Duration of overload	Interval between two overloads
Current circuit	400 V single-phase AC system		
	693 V three-phase system		
100 A	5	3 s	5 min.
250 A	1	1 s	1 hour
Voltage circuit 1 A, 2 A, 5 A			
Single-phase AC system 600 V $H_{\text{intern}}: 1.5 \text{ Ur}$	10	10 s	10 s
Three-phase system 1040 V $H_{\text{intern}}: 1.5 \text{ Ur}$	10	10 s	10 s

PROFIBUS-DP (bus interface RS-485)

Bus connections:	Screw terminals on terminals 15 to 21
Protocol:	PROFIBUS-DP EN 50 170
Protocol chip:	SPC 4
Transmission rate:	9.6 kBaud ... 12 MBaud automatic baud rate recognition
Addresses:	126 (default), set via Set_Slave_Address
Max. length of bus:	100 ... 1200 m (dependent on the baud rate and cable type)
Interface:	RS 485, electrically insulated (500 V)
Configuration possibilities:	Locally from a PC, or via bus master

Technical data

Inputs →

Input variables:	See Table 4 and 5
Measuring ranges:	See Table 4 and 5
Waveform:	Sinusoidal
Rated frequency:	50, 60 or 16 2/3 Hz
Consumption [VA] (at external power supply):	Voltage circuit: $U^2 / 400 \text{ k}\Omega$ Current circuit: $\leq I^2 \cdot 0.01 \Omega$

SINEAX DME 406 with PROFIBUS-DP

Programmable Multi-Transducer

Table 1: Measured values that are available at the bus interface, depending on the application

Symbols	Meaning	Application (see Table 5)		
		A11... A16	A34	A24/A44
U	Input voltage	•	—	—
U12	Phase-to-phase voltage L1 – L2	—	•	•
U23	Phase-to-phase voltage L2 – L3	—	•	•
U31	Phase-to-phase voltage L3 – L1	—	•	•
U1N	Phase-to-neutral voltage L1 – N	—	—	•
U2N	Phase-to-neutral voltage L2 – N	—	—	•
U3N	Phase-to-neutral voltage L3 – N	—	—	•
UM	Average value of the voltages	—	—	•
I	Input current	•	—	—
I1	AC current L1	—	•	•
I2	AC current L2	—	•	•
I3	AC current L3	—	•	•
IM	Average value of the currents	—	•	•
IMS	Average value of the currents and sign of the active power	—	•	•
IB	RMS value of the current with wire setting range (bimetal measuring function)	•	—	—
IB1	RMS value of the current with wire setting range (bimetal measuring function), phase 1	—	•	•
IB2	RMS value of the current with wire setting range (bimetal measuring function), phase 2	—	•	•
IB3	RMS value of the current with wire setting range (bimetal measuring function), phase 3	—	•	•
BS	Slave pointer function for the measurement of the RMS value IB	•	—	—
BS1	Slave pointer function for the measurement of the RMS value IB, phase 1	—	•	•
BS2	Slave pointer function for the measurement of the RMS value IB, phase 2	—	•	•
BS3	Slave pointer function for the measurement of the RMS value IB, phase 3	—	•	•
F	Frequency of the input variable	•	•	•
P	Active power of the system	•	•	•
P1	Active power phase 1 (phase-to-neutral L1 – N)	—	—	•
P2	Active power phase 2 (phase-to-neutral L2 – N)	—	—	•
P3	Active power phase 3 (phase-to-neutral L3 – N)	—	—	•
PF	Active power factor $\cos\varphi = P/S$	•	•	•
PF1	Active power factor phase 1, P1/S2	—	—	•
PF2	Active power factor phase 2, P2/S2	—	—	•
PF3	Active power factor phase 3, P3/S3	—	—	•
Q	Reactive power of the system	•	•	•
Q1	Reactive power phase 1 (phase-to-neutral L1 – N)	—	—	•
Q2	Reactive power phase 2 (phase-to-neutral L2 – N)	—	—	•
Q3	Reactive power phase 3 (phase-to-neutral L3 – N)	—	—	•
S	Apparent power of the system	•	•	•
S1	Apparent power phase 1 (phase-to-neutral L1 – N)	—	—	•
S2	Apparent power phase 2 (phase-to-neutral L2 – N)	—	—	•
S3	Apparent power phase 3 (phase-to-neutral L3 – N)	—	—	•

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

Symbols	Meaning	Application (see Table 5)		
		A11... A16	A34	A24/A44
LF	Power factor of the system	•	•	•
LF1	Power factor phase 1	—	—	•
LF2	Power factor phase 2	—	—	•
LF3	Power factor phase 3	—	—	•
QF	Reactive power factor $\sin\varphi = Q/S$	•	•	•
QF1	Reactive power factor phase 1, $Q1/S1$	—	—	•
QF2	Reactive power factor phase 2, $Q2/S2$	—	—	•
QF3	Reactive power factor phase 3, $Q3/S3$	—	—	•
EA	Energy meter 1	•	•	•
EB	Energy meter 2	•	•	•
EC	Energy meter 3	•	•	•
ED	Energy meter 4	•	•	•

Where c.t.'s and/or v.t.'s are used for measurement, the values are referred to the primaries of the transformers.

Variables

- Energy meter reset
- Maximum value pointer reset

Reference conditions

Ambient temperature:	15 ... 30 °C	Insulation test:	Input voltage: AC 400 V
Input variable:	Rated useful range	Input circuit:	AC 400 V
Power supply:	$H = H_n \pm 1\%$	Output:	DC 40 V
Active/reactive factor:	$\cos\varphi = 1$ resp. $\sin\varphi = 1$	Power supply:	AC 400 V
Frequency:	50 ... 60 Hz, 16 2/3 Hz		DC 230 V
Waveform:	Sinusoidal, form factor 1.1107	Surge test:	5 kV; 1.2/50 µs; 0.5 Ws
Miscellaneous:	EN 60 688	Test voltages:	50 Hz, 1 min. acc. to EN 61 010-1
			5550 V, inputs versus all other circuits as well as outer surface

System response

Accuracy class:	0.2 resp. 0.4 at applications with phase-shift	3250 V, input circuits versus each other
Energy meter:	1.0 acc. to IEC 1036 ($0.1 I_r \leq I \leq 1.5 I_r$)	3700 V, power supply versus outputs and SCI as well as outer surface
Duration of the measurement cycle:	Depending on measured variable and programming	490 V, outputs and SCI versus each other and versus outer surface
Response time:	1 ... 2 times the measurement cycle	

Influencing quantities and permissible variations

Acc. to EN 60 688

Electrical safety

Protection class:	II
Enclosure protection:	IP 40, housing IP 20, terminals
Oversupply category:	III

Power supply →○

AC voltage:	100, 110, 230, 400, 500 or 693 V, ± 10%, 45 to 65 Hz. Power consumption approx. 10 VA
-------------	--

DC, AC power pack (DC or 50 ... 60 Hz)

Table 2: Rated voltages and tolerances

Rated voltage U_N	Tolerance
24 ... 60 V DC, AC	DC – 15 ... + 33%
85 ... 230 V DC, AC	AC ± 10%

Consumption: ≤ 9 W resp. ≤ 10 VA

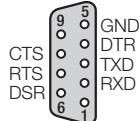
SINEAX DME 406 with PROFIBUS-DP

Programmable Multi-Transducer

Programming connector on transducer

Interface: RS 232 C

DSUB socket: 9-pin



The interface is electrically insulated from all other circuits.

Max. wire gauge:

$\leq 4.0 \text{ mm}^2$ single wire or
 $2 \times 2.5 \text{ mm}^2$ fine wire

Ambient tests

EN 60 068-2-6:

Vibration

Acceleration:

$\pm 2 \text{ g}$

Frequency range:

10 ... 150 ... 10 Hz, rate of frequency sweep:
1 octave/minute

Number of cycles:

10, in each of the three axes

EN 60 068-2-27:

Shock

Acceleration:

$3 \times 50 \text{ g}$

EN 60 068-2-1/-2/-3:

3 shocks each in 6 directions

Installation data

Housing: Housing **T24**

See Section "Dimensioned drawings"

Housing material: Lexan 940 (polycarbonate), flammability class V-0 acc. to UL 94, self-extinguishing, non-dripping, free of halogen

Mounting: For snapping onto top-hat rail (35 x 15 mm or 35 x 7.5 mm) acc. to EN 50 022 or directly onto a wall or panel using the pull-out screw hole brackets

Orientation: Any

Weight: With supply transformer approx. 1.1 kg
With AC/DC power pack approx. 0.7 kg

Ambient conditions

Variations due to ambient temperature:

$\pm 0.2\% / 10 \text{ K}$

Nominal range of use for temperature:

0...15...30...45 °C
(usage group II)

Operating temperature:

-10 to + 55 °C

Storage temperature:

-40 to + 85 °C

Annual mean relative humidity:

$\leq 75\%$

Altitude:

2000 m max.

Indoor use statement!

Terminals

Type: Screw terminals with wire guards

Table 3: SINEAX DME 406 with PROFIBUS-DP

The versions of the transducer below programmed with the **basic** configuration are available as standard versions. It is only necessary to quote the **Order No.**:

Description / Basic configuration	Marking	Order No.
1. Mechanical design:	Housing T24 for rail and wall mounting	406-1
2. Rated frequency:	50 Hz	1
3. Power supply:	24 ... 60 V DC/AC	7
	85 ... 230 V DC/AC	8
4. Power supply connection:	External connection (standard)	1
5. Test certificate	None supplied	0
6. Configuration	Basic configuration programmed	0
See Table 4 "Ordering Information"		
Basic configuration		
1. Application	4-wire, 3-phase system, asymmetric load (NPS)	A 44
2. Input voltage	Design value $U_r = 100 \text{ V}$	U 21
3. Input current:	Design value $I_r = 2 \text{ A}$	V 2
4. Primary data:	Without specification of primary rating	W 0

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

Description / Basic configuration	Marking	Order No.
5. Energy meter 1:	EA 00	
6. Energy meter 2:	FA 00	
7. Energy meter 3:	GA 00	
8. Energy meter 4:	HA 00	
See Table 5 "Programming"		

Table 4: Ordering Information

DESCRIPTION	MARKING
1. Mechanical design	
Housing T24 for rail and wall mounting	406 - 1
2. Rated frequency	
50 Hz (60 Hz possible without additional error; 16 2/3 Hz, additional error 1.25%)	1
60 Hz (50 Hz possible without additional error; 16 2/3 Hz, additional error 1.25%)	2
16 2/3 Hz (not re-programming by user, 50/60 Hz possible, but with additional error 1.25%)	3
3. Power supply	
Nominal range	
AC 90 ... 110 V $H_n = 100$	1
AC 99 ... 121 V $H_n = 110$	2
AC 207 ... 253 V $H_n = 230$	3
AC 360 ... 440 V $H_n = 400$	4
AC 450 ... 550 V $H_n = 500$	5
AC 623 ... 762 V $H_n = 693$	6
DC/AC 24 ... 60 V	7
DC/AC 85 ... 230 V	8
4. Power supply connection	
External connection (standard)	1
Internal from voltage input not available for rated frequency 16 2/3 Hz and applications A15 / A16 / A24.	2
Caution: The power supply voltage must agree with the input voltage (Table 5)!	
5. Test certificate	
None supplied	0
With test certificate in German	D
With test certificate in English	E
6. Configuration	
Basic configuration programmed (see Table 3) (not available if the power supply is taken from the voltage input)	0
Programmed to order	9
All the programming data must be entered on Form W 2410 e and the form must be included with the order, if the primary values of the measured variables or meter readings have to be transferred!	

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

Table 5: Programming

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

DESCRIPTION	Application		
	A11... A16	A34	A24/A44
5. Energy meter 1			
Not used	EA00	EA00	EA00
I System [Ah]	EA50	—	—
I1 L1 [Ah]	—	EA51	EA51
I2 L2 [Ah]	—	EA52	EA52
I3 L3 [Ah]	—	EA53	EA53
S System [VAh]	EA54	EA54	EA54
S1 L1 [VAh]	—	—	EA55
S2 L2 [VAh]	—	—	EA56
S3 L3 [VAh]	—	—	EA57
P System (incoming) [Wh]	EA58	EA58	EA58
P1 L1 (incoming) [Wh]	—	—	EA59
P2 L2 (incoming) [Wh]	—	—	EA61
P3 L3 (incoming) [Wh]	—	—	EA61
Q System (inductive) [Varh]	EA62	EA62	EA62
Q1 L1 (inductive) [Varh]	—	—	EA63
Q2 L2 (inductive) [Varh]	—	—	EA64
Q3 L3 (inductive) [Varh]	—	—	EA65
P System (outgoing) [Wh]	EA66	EA66	EA66
P1 L1 (outgoing) [Wh]	—	—	EA67
P2 L2 (outgoing) [Wh]	—	—	EA68
P3 L3 (outgoing) [Wh]	—	—	EA69
Q System (capacitive) [Varh]	EA70	EA70	EA70
Q1 L1 (capacitive) [Varh]	—	—	EA71
Q2 L2 (capacitive) [Varh]	—	—	EA72
Q3 L3 (capacitive) [Varh]	—	—	EA73
6. Energy meter 2			
Same as energy meter 1, but markings start with a capital F	FA ..	FA ..	FA ..
7. Energy meter 3			
Same as energy meter 1, but markings start with a capital G	GA ..	GA ..	GA ..
8. Energy meter 4			
Same as energy meter 1, but markings start with a capital H	HA ..	HA ..	HA ..

Note: The meter reading is referred to the power $P = I \cdot U_p$ for I, respectively $I_1 \cdot U_p$ for I1, $I_2 \cdot U_p$ for I2 and $I_3 \cdot U_p$ for I3 where U_p = the primary rated voltage or the secondary rated voltage if there is no v.t.

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

Electrical connections

Function		Connection
Measuring input	AC current	IL1 1 / 3 IL2 4 / 6 IL3 7 / 9
	AC voltage	UL1 2 UL2 5 UL3 8 N 11
RS 485 (PROFIBUS DP)	VP	15
	RxD/TxD - P	16
	RxD/TxD - N	17
	Shield	18
	RxD/TxD - P'	19
	RxD/TxD - N'	20
	DGND	21
Power supply AC	~	13
	~	14
DC	+	13
	-	14

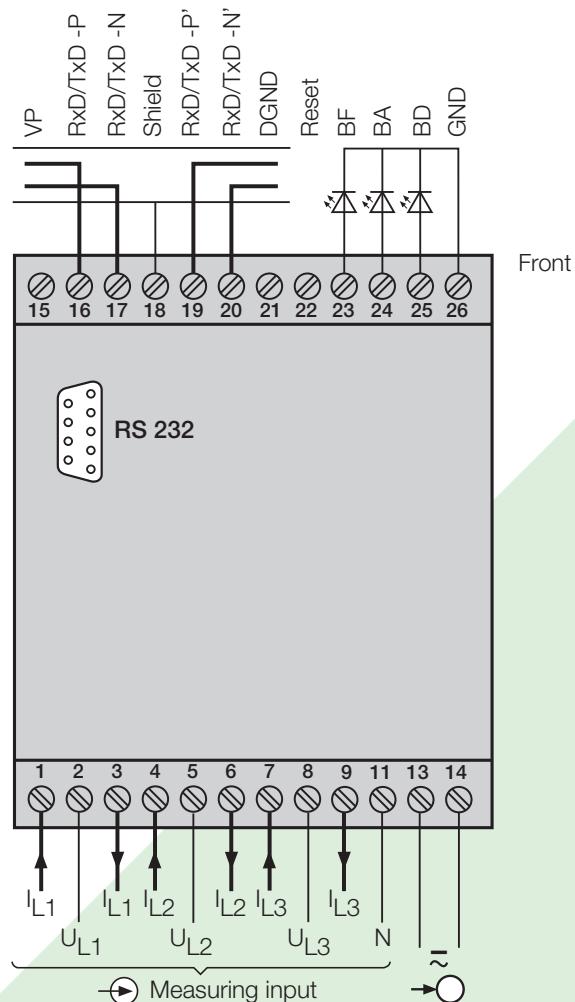
If power supply is taken from the measured voltage internal connections are as follow:

Application (system)	Internal connection Terminal / System
Single-phase AC current	2 / 11 (L1 – N)
4-wire 3-phase symmetric load	2 / 11 (L1 – N)
All other (apart from A15 / A16 / A24)	2 / 5 (L1 – L2)

Bus Cable Termination

Both ends of the bus cable must be fitted with bus terminators. This ensures that:

- the conductor has a fixed rest voltage,
- reflections in the cable are minimized and
- the bus has an almost constant load.



BF = Bus Failure LED

The slave is in the state "Baud Search" and does not receive valid telegrams

BA = Bus Aktive

The slave is exchanging data cyclically

BD = Bus Diagnosis LED

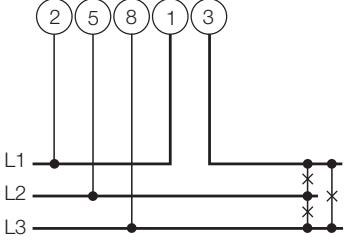
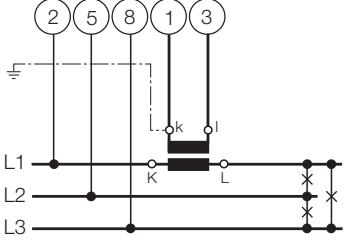
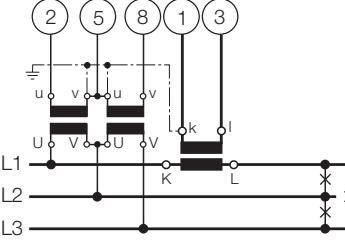
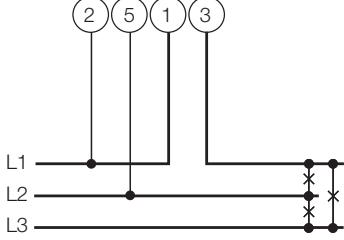
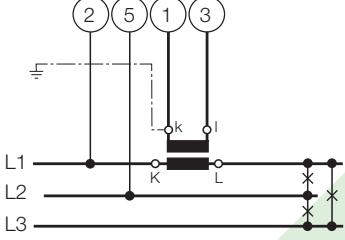
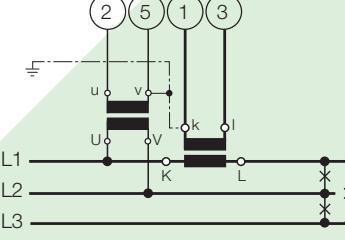
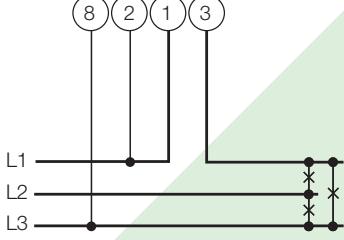
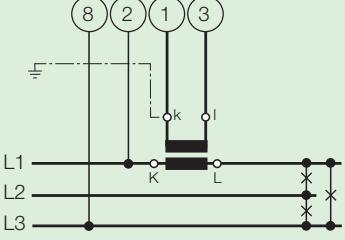
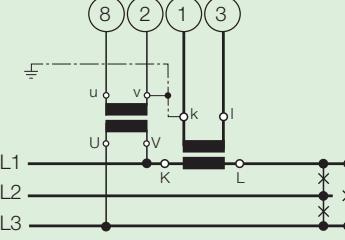
Lit: Parameter error

Flashing: Configuration error

Measuring inputs

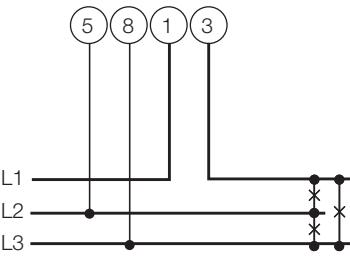
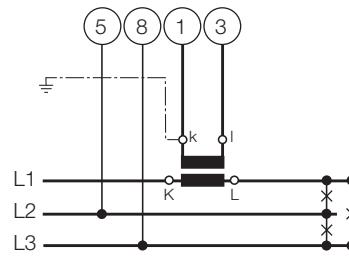
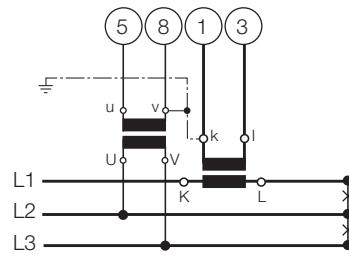
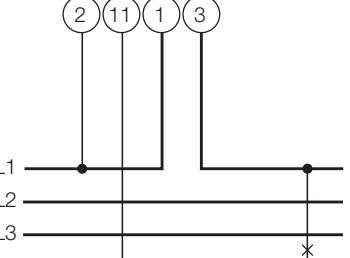
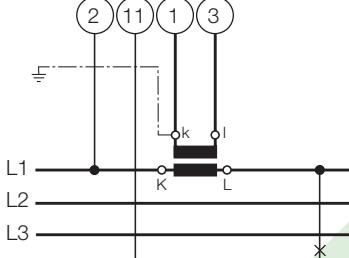
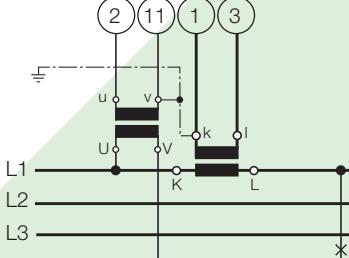
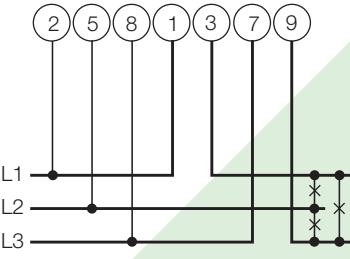
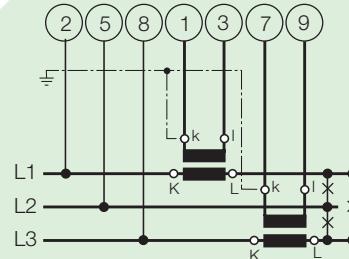
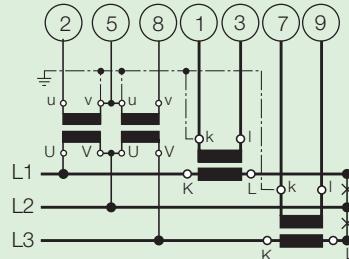
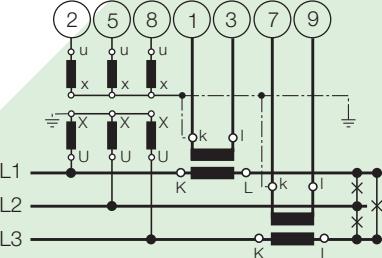
System / application	Terminals
Single-phase AC system (A11)	

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

Measuring input																
System / application	Terminals															
3-wire 3-phase symmetric load I: L1 (A13)	   <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>2</th> <th>5</th> <th>8</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1 3</td> <td>L2</td> <td>L3</td> <td>L1</td> </tr> <tr> <td>L3</td> <td>1 3</td> <td>L3</td> <td>L1</td> <td>L2</td> </tr> </tbody> </table>	Current transf.	Terminals	2	5	8	L2	1 3	L2	L3	L1	L3	1 3	L3	L1	L2
Current transf.	Terminals	2	5	8												
L2	1 3	L2	L3	L1												
L3	1 3	L3	L1	L2												
3-wire 3-phase symmetric load Phase-shift U: L1 – L2 I: L1 (A12)	   <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>2</th> <th>5</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1 3</td> <td>L2</td> <td>L3</td> </tr> <tr> <td>L3</td> <td>1 3</td> <td>L3</td> <td>L1</td> </tr> </tbody> </table>	Current transf.	Terminals	2	5	L2	1 3	L2	L3	L3	1 3	L3	L1			
Current transf.	Terminals	2	5													
L2	1 3	L2	L3													
L3	1 3	L3	L1													
3-wire 3-phase symmetric load Phase-shift U: L3 – L1 I: L1 (A15)	   <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>8</th> <th>2</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1 3</td> <td>L1</td> <td>L2</td> </tr> <tr> <td>L3</td> <td>1 3</td> <td>L2</td> <td>L3</td> </tr> </tbody> </table>	Current transf.	Terminals	8	2	L2	1 3	L1	L2	L3	1 3	L2	L3			
Current transf.	Terminals	8	2													
L2	1 3	L1	L2													
L3	1 3	L2	L3													

SINEAX DME 406 with PROFIBUS-DP

Programmable Multi-Transducer

Measuring inputs													
System / application	Terminals												
3-wire 3-phase symmetric load Phase-shift U: L2 – L3 I: L1 (A16)	   <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>5</th> <th>8</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1 3</td> <td>L3</td> <td>L1</td> </tr> <tr> <td>L3</td> <td>1 3</td> <td>L1</td> <td>L2</td> </tr> </tbody> </table>	Current transf.	Terminals	5	8	L2	1 3	L3	L1	L3	1 3	L1	L2
Current transf.	Terminals	5	8										
L2	1 3	L3	L1										
L3	1 3	L1	L2										
4-wire 3-phase symmetric load I: L1 (A14)	   <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>2</th> <th>11</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1 3</td> <td>L2</td> <td>N</td> </tr> <tr> <td>L3</td> <td>1 3</td> <td>L3</td> <td>N</td> </tr> </tbody> </table>	Current transf.	Terminals	2	11	L2	1 3	L2	N	L3	1 3	L3	N
Current transf.	Terminals	2	11										
L2	1 3	L2	N										
L3	1 3	L3	N										
3-wire 3-phase asymmetric load (A34)	   												

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

Measuring inputs	
System / application	Terminals
4-wire 3-phase asymmetric load (A44)	
	<p>3 single-pole insulated voltage transformers in high-voltage system</p>
4-wire 3-phase asymmetric load, Open-Y connection (A24)	<p>Low-voltage system</p>
	<p>2 single-pole insulated voltage transformers in high-voltage system</p>

Relationship between PF, QF and LF

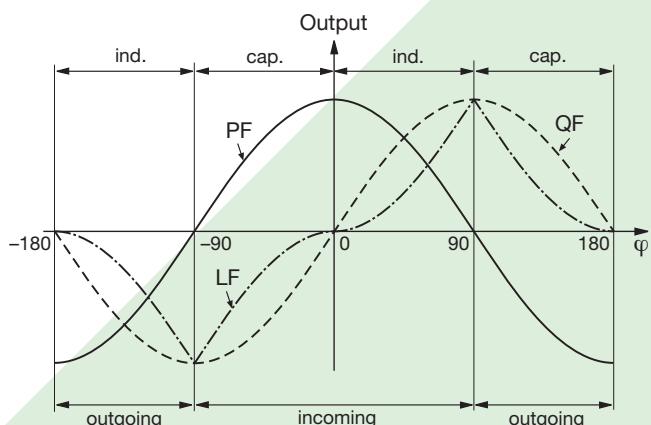


Fig. 3. Active power PF —, reactive power QF -----, power factor LF - - - -.

SINEAX DME 406 with PROFIBUS-DP Programmable Multi-Transducer

Dimensioned drawings

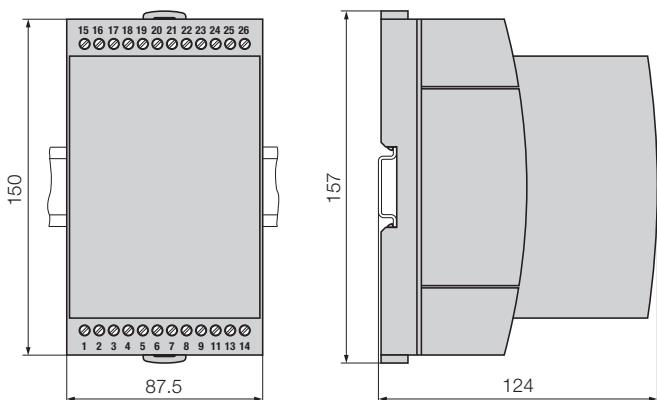


Fig. 4. SINEAX DME 406 in housing T24 clipped onto a top-hat rail (35 × 15 mm or 35×7.5 mm, acc. to EN 50 022).

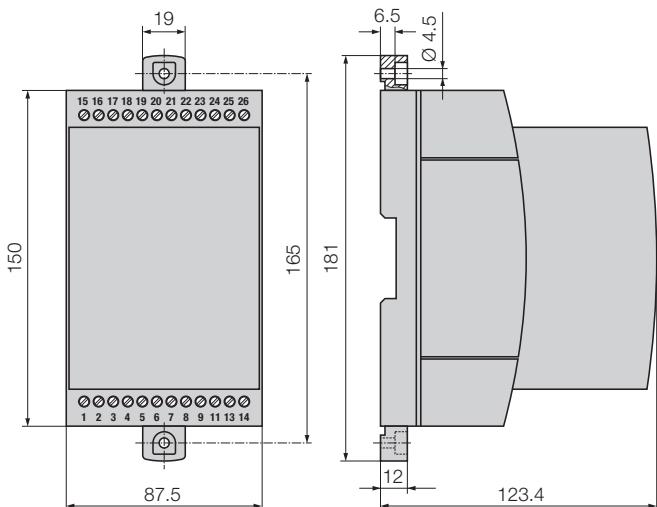


Fig. 5. SINEAX DME 406 in housing T24, screw hole mounting brackets pulled out.

Table 6: Accessories

Description	Order No.
Programming cable	980 179
Configuration software DME 4 for SINEAX/EURAX DME 424, 440, 442, SINEAX DME 400, 401 and 406 Windows 3.1x, 95, 98, NT and 2000 on CD in German, English, French, Italian and Dutch (download free of charge under http://www.camillebauer.com)	146 557
In addition, the CD contains all configuration programmes presently available for Camille Bauer products.	
Operating Instructions DME 406-1 B d-f-e, in three languages: German, French, English	146 888



Description	Order No.
SINEAX A 200	154 063
Interconnecting cable sub D 9 pol. mal/male 1.8 m	154 071

 **CAMILLE BAUER**
Rely on us.

Camille Bauer Ltd
Aargauerstrasse 7
CH-5610 Wohlen / Switzerland
Phone: +41 56 618 21 11
Fax: +41 56 618 35 35
info@camillebauer.com
www.camillebauer.com

Appendix: PROGRAMMING FOR SINEAX TYPE DME 406



without analog outputs, with PROFIBUS DP
(see Data Sheet DME 406-1 Le, Table 5: "Programming")

Customer / Agent:	Date:
Order No. / Item:	Delivery date:
No of instruments:	
Type of instruments (marking):	

Codes for features 1 to 8:

Features 1 to 8 concern data for configuring the software.

1. Application	
A <input type="checkbox"/>	System _____
2. Rated input voltage, rated value	
U <input type="checkbox"/>	Ur = _____ V _____
3. Rated input current, rated value	
V <input type="checkbox"/>	Ir = _____ A _____
4. Primary rating	
W <input type="checkbox"/>	VT = _____ kV CT = _____ A
Specify transformer ratio primary, e.g. 33 kV, 1000 A	
The secondary ratings must correspond to the rated input voltage and current specified for feature 2, respectively 3.	
E <input type="checkbox"/> A <input type="checkbox"/>	5. Energy meter 1
F <input type="checkbox"/> A <input type="checkbox"/>	6. Energy meter 2
G <input type="checkbox"/> A <input type="checkbox"/>	7. Energy meter 3
H <input type="checkbox"/> A <input type="checkbox"/>	8. Energy meter 4