

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

for the measurement of electrical variables in heavy-current power system



Application

EURAX DME 440 (Fig. 1) is a programmable transducer with a **RS 485 bus interface (MODBUS®)**. It supervises several variables of an electrical power system **simultaneously** and generates 4 proportional analog output signals.

The **RS 485** interface enables the user to determine the number of variables to be supervised (up to the maximum available). The levels of all internal energy meters that have been configured (max. 4) can also viewed. Provision is made for programming the EURAX DME 440 via the bus. A standard EIA 485 interface can be used, but there is no dummy load resistor for the bus.

The transducers are also equipped with a **RS 232** serial interface to which a PC with the corresponding software can be connected for programming or accessing and executing useful ancillary functions. This interface is needed for bus operation to configure the device address, the Baud rate and possibly increasing the telegram waiting time (if the master is too slow) defined in the MODBUS® protocol.

The usual methods of connection, the types of measured variables, their ratings, the transfer characteristic for each output and the type of internal energy meter are the main parameters that can be programmed.

The ancillary functions include a power system check, provision for displaying the measured variably on a PC monitor, the simulation of the outputs for test purposes and a facility for printing nameplate.

The transducer fulfils all the essential requirements and regulations concerning electromagnetic compatibility (**EMC**) and **safety** (IEC 1010 resp. EN 61 010). It was developed and is manufactured and tested in strict accordance with the **quality assurance standard** ISO 9001.

Features / Benefits

- Simultaneous measurement of several variables of a heavy-current power system / Full supervision of an asymmetrically loaded four-wire power system, rated current 1 to 6 A, rated voltage 57 to 400 V (phase-to-neutral) resp. 100 to 693 V (phase-to-phase)



Fig. 1. EURAX DME 440 as plug-in module for 19" rack-mounted case, front plate width 14 TE.


Measured variables	Output	Types
Current, voltage (rms), active/reactive/apparent power $\cos\phi$, $\sin\phi$, power factor	4 analog outputs and bus interface RS 485 (MODBUS)	DME 440
RMS value of the current with wire setting range (bimetal measuring function)	2 analog outputs and 4 digital outputs	DME 442
Slave pointer function for the measurement of the RMS value IB	or 4 analog outputs and 2 digital outputs	
Frequency	see data sheet DME 424/442-2 Le	
Average value of the currents with sign of the active power (power system only)		

- For all heavy-current power system variables
- 4 analog outputs
- Input voltage up to 693 V (phase-to-phase)
- Universal analog outputs (programmable)
- High accuracy: U/I 0.2%, P 0.25% (under reference conditions)
- 4 integrated energy meters, storage every each 203 s, storage for 20 years

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

- Windows software with password protection for programming, data analysis, power system status simulation, acquisition of meter data and making settings
- DC-, AC-power pack with wide power supply tolerance / Universal
- Plug-in module (front plate width 14 TE) for 19" rack-mounted case / Ease of mounting in rack system

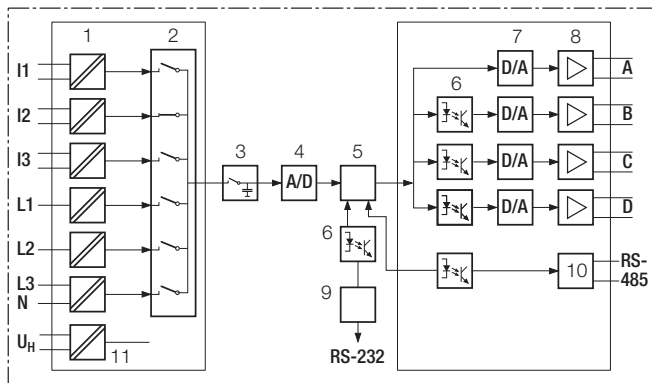

- 1 = Input transformer
2 = Multiplexer
3 = Latching stage
4 = A/D converter
5 = Microprocessor
6 = Electrical insulation
7 = D/A converter
8 = Output amplifier / Latching stage
9 = Programming interface RS-232
10 = Bus RS 485 (MODBUS)
11 = Power supply

Fig. 2. Block diagram.

Symbols

Symbols	Meaning
X	Measured variable
X0	Lower limit of the measured variable
X1	Break point of the measured variable
X2	Upper limit of the measured variable
Y	Output variable
Y0	Lower limit of the output variable
Y1	Break point of the output variable
Y2	Upper limit of the output variable
U	Input voltage
Ur	Rated value of the input voltage
U 12	Phase-to-phase voltage L1 – L2
U 23	Phase-to-phase voltage L2 – L3
U 31	Phase-to-phase voltage L3 – L1
U1N	Phase-to-neutral voltage L1 – N
U2N	Phase-to-neutral voltage L2 – N
U3N	Phase-to-neutral voltage L3 – N
UM	Average value of the voltages (U1N + U2N + U3N) / 3

Symbols	Meaning
I	Input current
I1	AC current L1
I2	AC current L2
I3	AC current L3
Ir	Rated value of the input current
IM	Average value of the currents (I1 + I2 + I3) / 3
IMS	Average value of the currents and sign of the active power (P)
IB	RMS value of the current with wire setting range (bimetal measuring function)
IBT	Response time for IB
BS	Slave pointer function for the measurement of the RMS value IB
BST	Response time for BS
φ	Phase-shift between current and voltage
F	Frequency of the input variable
Fn	Rated frequency
P	Active power of the system $P = P1 + P2 + P3$
P1	Active power phase 1 (phase-to-neutral L1 – N)
P2	Active power phase 2 (phase-to-neutral L2 – N)
P3	Active power phase 3 (phase-to-neutral L3 – N)
Q	Reactive power of the system $Q = Q1 + Q2 + Q3$
Q1	Reactive power phase 1 (phase-to-neutral L1 – N)
Q2	Reactive power phase 2 (phase-to-neutral L2 – N)
Q3	Reactive power phase 3 (phase-to-neutral L3 – N)
S	Apparent power of the system $S = \sqrt{I_1^2 + I_2^2 + I_3^2} \cdot \sqrt{U_1^2 + U_2^2 + U_3^2}$
S1	Apparent power phase 1 (phase-to-neutral L1 – N)
S2	Apparent power phase 2 (phase-to-neutral L2 – N)
S3	Apparent power phase 3 (phase-to-neutral L3 – N)
Sr	Rated value of the apparent power of the system
PF	Active power factor $\cos\phi = P/S$
PF1	Active power factor phase 1 $P1/S1$
PF2	Active power factor phase 2 $P2/S2$
PF3	Active power factor phase 3 $P3/S3$

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

Symbols	Meaning
QF	Reactive power factor $\sin \varphi = Q/S$
QF1	Reactive power factor phase 1 Q1/S1
QF2	Reactive power factor phase 2 Q2/S2
QF3	Reactive power factor phase 3 Q3/S3
LF	Power factor of the system $LF = \text{sgn}Q \cdot (1 - PF)$
LF1	Power factor phase 1 $\text{sgn}Q1 \cdot (1 - PF1)$
LF2	Power factor phase 2 $\text{sgn}Q2 \cdot (1 - PF2)$
LF3	Power factor phase 3 $\text{sgn}Q3 \cdot (1 - PF3)$
c	Factor for the intrinsic error
R	Output load
Rn	Rated burden
H	Power supply
Hn	Rated value of the power supply
CT	c.t. ratio
VT	v.t. ratio

Applicable standards and regulations

IEC 688 or EN 60 688	Electrical measuring transducers for converting AC electrical variables into analog and digital signals
IEC 1010 or EN 61 010	Safety regulations for electrical measuring, control and laboratory equipment
IEC 529 or EN 60529	Protection types by case (code IP)
IEC 255-4 Part E5	High-frequency disturbance test (static relays only)
IEC 1000-4-2/-3/-4/-6	Electromagnetic compatibility for industrial-process measurement and control equipment
EN 55 011	Electromagnetic compatibility of data processing and telecommunication equipment Limits and measuring principles for radio interference and information equipment
IEC 68-2-1/-2/-3/-6/-27 or EN 60 068-2-1/-2/-3/-6/-27	Ambient tests -1 Cold, -2 Dry heat, -3 Damp heat, -6 Vibration, -27 Shock
DIN 40 110	AC quantities
DIN 43 807	Terminal markings

IEC 1036	Alternating current static watt-hour meters for active energy (classes 1 and 2)
DIN 43 864	Current interface for the transmission of impulses between impulse encoder counter and tariff meter
UL 94	Tests for flammability of plastic materials for parts in devices and appliances

Technical data

Inputs

Input variables:	see Table 2 and 3
Measuring ranges:	see Table 2 and 3
Waveform:	Sinusoidal
Rated frequency:	50...60 Hz; 16 2/3 Hz
Consumption:	Voltage circuit: $\leq U^2 / 400 \text{ k}\Omega$ Condition: external power supply Current circuit: $\leq I^2 \cdot 0.01 \Omega$

Continuous thermal ratings of inputs

Current circuit	10 A	400 V single-phase AC system 693 V three-phase system
Voltage circuit	480 V 831 V	single-phase AC system three-phase system

Short-time thermal rating of inputs

Input variable	Number of inputs	Duration of overload	Interval between two overloads
Current circuit	400 V single-phase AC system 693 V three-phase system		
100 A	5	3 s	5 min.
250 A	1	1 s	1 hour
Voltage circuit	1 A, 2 A, 5 A		
Single-phase AC system 600 V $H_{\text{intern}}: 1.5 U_r$	10	10 s	10 s
Three-phase system 1040 V $H_{\text{intern}}: 1.5 U_r$	10	10 s	10 s

Continuation of "Technical data" see on next page!

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

MODBUS® (Bus interface RS-485)

Terminals:	GND on pin 2d Tx- / Rx- on pin 6z Tx+ / Rx+ on pin 6d (see Fig. 6)
Connecting cable:	Screened twisted pair
Max. distance:	Approx. 1200 m (approx. 4000 ft.)
Baudrate:	1200 ... 9600 Bd (programmable)
Number of bus stations:	32 (including master)
Dummy load:	Not required

Active/reactive factor:	$\cos\phi = 1$ resp. $\sin\phi = 1$
Frequency:	50 ... 60 Hz, 16 2/3 Hz
Waveform:	Sinusoidal, form factor 1.1107
Output load:	DC current output:

$$R_n = \frac{7.5 \text{ V}}{Y2} \pm 1\%$$

DC voltage output:

$$R_n = \frac{Y2}{1 \text{ mA}} \pm 1\%$$

Miscellaneous:	EN 60 688
----------------	-----------

Analog outputs

For the outputs A, B, C and D:

Output variable Y	Impressed DC current	Impressed DC voltage
Full scale Y2	see "Ordering information"	see "Ordering information"
Limits of output signal for input overload and/or		
$R = 0$	$1.25 \cdot Y2$	40 mA
$R \rightarrow \infty$	30 V	$1.25 Y2$
Rated useful range of output load	$0 \leq \frac{7.5 \text{ V}}{Y2} \leq \frac{15 \text{ V}}{Y2}$	$\frac{Y2}{2 \text{ mA}} \leq \frac{Y2}{1 \text{ mA}} \leq \infty$
AC component of output signal (peak-to-peak)	$\leq 0.005 Y2$	$\leq 0.005 Y2$

The outputs A, B, C and D may be either short or open-circuited. They are electrically insulated from each other and from all other circuits (floating).

All the full-scale output values can be reduced subsequently using the programming software, but a supplementary error results.

The hardware full-scale settings for the analog outputs may also be changed subsequently. Conversion of a current to a voltage output or vice versa is also possible. This necessitates changing resistors on the output board. The full-scale values of the current and voltage outputs are set by varying the effective value of two parallel resistors (better resolution). The values of the resistors are selected to achieve the minimum absolute error. Calibration with the programming software is always necessary following conversion of the outputs. Refer to the Operating Instructions. **Caution:** The warranty is void if the device is tampered with!

Reference conditions

Ambient temperature:	15 ... 30 °C
Pre-conditioning:	30 min. acc. to EN 60 688 Section 4.3, Table 2
Input variable:	Rated useful range
Power supply:	$H = H_n \pm 1\%$

System response

Accuracy class: (the reference value is the full-scale value Y2)

Measured variable	Condition	Accuracy class*
System: Active, reactive and apparent power	$0.5 \leq X2/Sr \leq 1.5$ $0.3 \leq X2/Sr < 0.5$	0.25 c 0.5 c
Phase: Active, reactive and apparent power	$0.167 \leq X2/Sr \leq 0.5$ $0.1 \leq X2/Sr < 0.167$	0.25 c 0.5 c
Power factor, active power factor and reactive power factor	$0.5Sr \leq S \leq 1.5 Sr$, $(X2 - X0) = 2$	0.25 c
	$0.5Sr \leq S \leq 1.5 Sr$, $1 \leq (X2 - X0) < 2$	0.5 c
	$0.5Sr \leq S \leq 1.5 Sr$, $0.5 \leq (X2 - X0) < 1$	1.0 c
	$0.1Sr \leq S < 0.5 Sr$, $(X2 - X0) = 2$	0.5 c
	$0.1Sr \leq S < 0.5 Sr$, $1 \leq (X2 - X0) < 2$	1.0 c
	$0.1Sr \leq S < 0.5 Sr$, $0.5 \leq (X2 - X0) < 1$	2.0 c
AC voltage	$0.1 Ur \leq U \leq 1.2 Ur$	0.2 c
AC current / current averages	$0.1 Ir \leq I \leq 1.5 Ir$	0.2 c
System frequency	$0.1 Ur \leq U \leq 1.2 Ur$ resp. $0.1 Ir \leq I \leq 1.5 Ir$	$0.15 + 0.03 c$ ($f_N = 50...60 \text{ Hz}$) $0.15 + 0.1 c$ ($f_N = 16 \text{ 2/3 Hz}$)
Energy meter	acc. to IEC 1036 $0.1 Ir \leq I \leq 1.5 Ir$	1.0

* Basic accuracy 0.5 c for applications with phase-shift

MODBUS® is a registered trademark of the Schneider Automation Inc.

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

Duration of the measurement cycle: Approx. 0.5 to 1.2 s at 50 Hz, depending on measured variable and programming

Response time: 1 ... 2 times the measurement cycle

Factor c (the highest value applies):

Linear characteristic:
$$c = \frac{1 - \frac{Y_0}{Y_2}}{1 - \frac{X_0}{X_2}} \text{ or } c = 1$$

Bent characteristic:

$X_0 \leq X \leq X_1$
$$c = \frac{Y_1 - Y_0}{X_1 - X_0} \cdot \frac{X_2}{Y_2} \text{ or } c = 1$$

$X_1 < X \leq X_2$
$$c = \frac{1 - \frac{Y_1}{Y_2}}{1 - \frac{X_1}{X_2}} \text{ or } c = 1$$

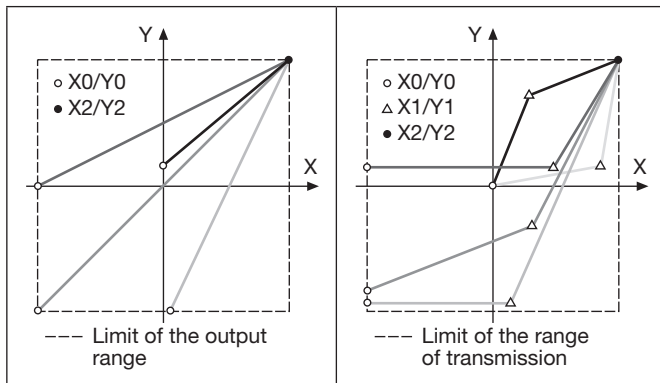


Fig. 3. Examples of settings with linear characteristic.

Fig. 4. Examples of settings with bent characteristic.

Influencing quantities and permissible variations

Acc. to IEC 688

Safety

Protection class: II

Installation category: III

Insulation test (versus earth):

Input voltage: AC 400 V

Input current: AC 400 V

Output: DC 40 V

Power supply: AC 400 V
DC 230 V

Surge test: 5 kV; 1.2/50 µs; 0.5 Ws

Test voltage: 50 Hz, 1 min. acc. to EN 61 010-1
5550 V, inputs versus all other circuits as well as outer surface

Test voltage (continuation):

3250 V, input circuits versus each other

3700 V, power supply versus outputs and SCI as well as outer surface

490 V, outputs and SCI versus each other and versus outer surface

Power supply →

AC/DC power pack (DC and 50 ... 60 Hz)

Table 1: Rated voltages and tolerances


Rated voltage U_N	Tolerance
24 ... 60 V DC/AC	DC – 15 ... + 33%
85 ... 230 V DC/AC	AC ± 10%

Consumption: ≤ 9 W resp. ≤ 10 VA

Programming connector on transducer

Interface: RS 232 C

DSUB socket: 9-pin

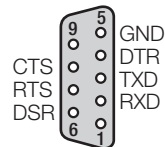

The interface is electrically insulated from all other circuits.

Installation data

Housing: Plug-in module for 19" rack-mounted case, Euro format 100×160 mm

Space requirements: **14 TE** (70.82 mm) (see section "Dimensional drawing")

Front plate colour: Grey RAL 7032

Designation: EURAX DME 4

Mounting position: Any

Electrical connections: Two 32-pole plugs acc. to DIN 41 612, pattern F and 6-pole plug (contact fitting see section "Electrical connections")

Coding: By coding pins, removed/not removed, see section "Electrical connections"

Weight: Approx. 0.7 kg

Ambient tests

EN 60 068-2-6: Vibration

Acceleration: ± 2 g

Frequency range: 10 ... 150 ... 10 Hz, rate of frequency sweep: 1 octave/minute

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

Number of cycles:	10, in each of the three axes	Nominal range of use for temperature:	0...15...30...45 °C (usage group II)
EN 60 068-2-27:	Shock	Operating temperature:	– 10 to + 55 °C
Acceleration:	3 x 50 g 3 shocks each in 6 directions	Storage temperature:	– 40 to + 85 °C
EN 60 068-2-1/-2/-3:	Cold, dry heat, damp heat	Annual mean relative humidity:	≤ 75%
Ambient conditions		Altitude:	2000 m max.
Variations due to ambient temperature:	± 0,2% / 10 K	Indoor use statement!	

Table 2: Ordering Information

DESCRIPTION	MARKING
1. Mechanical design Plug-in module for 19" rack-mounted case	440 – 2
2. Rated frequency 50 Hz (60 Hz possible without additional error; 16 2/3 Hz, additional error 1.25 · c) 60 Hz (50 Hz possible without additional error; 16 2/3 Hz, additional error 1.25 · c) 16 2/3 Hz (not re-programming by user, 50/60 Hz possible, but with additional error 1.25 · c)	1 2 3
3. Power supply Nominal range 24 ... 60 V DC, AC Nominal range 85 ... 230 V DC, AC	7 8
4. Power supply connection External (standard)	1
5. Full-scale output signal, output A Output A, Y2 = 20 mA (standard) Output A, Y2 (full-scale current Y2 [mA] 1 to 20) [mA] Output A, Y2 (full-scale voltage Y2 [V] 1 to 10) [V]	1 9 Z
6. Full-scale output signal, output B Output B, Y2 = 20 mA (standard) Output B, Y2 (full-scale current Y2 [mA] 1 to 20) [mA] Output B, Y2 (full-scale voltage Y2 [V] 1 to 10) [V]	1 9 Z
7. Full-scale output signal, output C Output C, Y2 = 20 mA (standard) Output C, Y2 (full-scale current Y2 [mA] 1 to 20) [mA] Output C, Y2 (full-scale voltage Y2 [V] 1 to 10) [V]	1 9 Z
8. Full-scale output signal, output D Output D, Y2 = 20 mA (standard) Output D, Y2 (full-scale current Y2 [mA] 1 to 20) [mA] Output D, Y2 (full-scale voltage Y2 [V] 1 to 10) [V]	1 9 Z
9. Test certificate None supplied Supplied	0 1

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

DESCRIPTION	MARKING
10. Configuration	
Basic configuration, programmed	0
According to specification	9
All the programming data must be entered on Form W 2402e (see appendix) and the form must be included with the order!	

Table 3: Programming

DESCRIPTION	APPLICATION		
	A11... A16	A34	A24/A44
1. Application (system)			
Single-phase AC	A11	—	—
3-wire, 3-phase symmetric load, phase-shift U: L1-L2, I: L1*	A12	—	—
3-wire, 3-phase symmetric load	A13	—	—
4-wire, 3-phase symmetric load	A14	—	—
3-wire, 3-phase symmetric load, phase-shift U: L3-L1, I: L1*	A15	—	—
3-wire, 3-phase symmetric load, phase-shift U: L2-L3, I: L1*	A16	—	—
3-wire, 3-phase asymmetric load	—	A34	—
4-wire, 3-phase asymmetric load	—	—	A44
4-wire, 3-phase asymmetric load, open-Y	—	—	A24
2. Rated input voltage			
Rated value $U_r = 57.7 \text{ V}$	U01	—	—
Rated value $U_r = 63.5 \text{ V}$	U02	—	—
Rated value $U_r = 100 \text{ V}$	U03	—	—
Rated value $U_r = 110 \text{ V}$	U04	—	—
Rated value $U_r = 120 \text{ V}$	U05	—	—
Rated value $U_r = 230 \text{ V}$	U06	—	—
Rated value U_r ($U_r [\text{V}] 57 \text{ to } 400$) [V]	U91	—	—
Rated value $U_r = 100 \text{ V}$	U21	U21	U21
Rated value $U_r = 110 \text{ V}$	U22	U22	U22
Rated value $U_r = 115 \text{ V}$	U23	U23	U23
Rated value $U_r = 120 \text{ V}$	U24	U24	U24
Rated value $U_r = 400 \text{ V}$	U25	U25	U25
Rated value $U_r = 500 \text{ V}$	U26	U26	U26
Rated value U_r ($U_r [\text{V}] > 100 \text{ to } 693$) [V]	U93	U93	U93
Lines U01 to U06: Only for single phase AC current or 4-wire, 3-phase symmetric load			
3. Rated input current			
Rated value $I_r = 1 \text{ A}$	V1	V1	V1
Rated value $I_r = 2 \text{ A}$	V2	V2	V2
Rated value $I_r = 5 \text{ A}$	V3	V3	V3
Rated value I_r ($I_r [\text{A}] > 1 \text{ to } 6$) [A]	V9	V9	V9

* Basic accuracy 0.5 c

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

DESCRIPTION	APPLICATION		
	A11... A16	A34	A24/A44
4. Primary rating (voltage and current transformer)			
Without specification of primary rating	W0	W0	W0
VT = _____ kV CT = _____ A			
Specify transformer ratio primary, e.g. 33 kV, 1000 A	W9	W9	W9
The secondary ratings must correspond to the rated input voltage and current specified for feature 2, respectively 3.			
5. Measured variable, output A			
Not used	AA000	AA000	AA000
Initial value X0 Final value X2			
U System X0 = 0 X2 = Ur	AA001	—	—
U12 L1-L2 X0 = 0 X2 = Ur	—	AA001	AA001
U System $0 \leq X0 \leq 0.9 \cdot X2$ $0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur$	AA901	—	—
U1N L1-N $0 \leq X0 \leq 0.9 \cdot X2$ $0.8 \cdot Ur / \sqrt{3} \leq X2 \leq 1.2 \cdot Ur / \sqrt{3}$	—	—	AA902
U2N L2-N $0 \leq X0 \leq 0.9 \cdot X2$ $0.8 \cdot Ur / \sqrt{3} \leq X2 \leq 1.2 \cdot Ur / \sqrt{3}$	—	—	AA903
U3N L3-N $0 \leq X0 \leq 0.9 \cdot X2$ $0.8 \cdot Ur / \sqrt{3} \leq X2 \leq 1.2 \cdot Ur / \sqrt{3}$	—	—	AA904
U12 L1-L2 $0 \leq X0 \leq 0.9 \cdot X2$ $0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur$	—	AA905	AA905
U23 L2-L3 $0 \leq X0 \leq 0.9 \cdot X2$ $0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur$	—	AA906	AA906
U31 L3-L1 $0 \leq X0 \leq 0.9 \cdot X2$ $0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur$	—	AA907	AA907
I System $0 \leq X0 \leq 0.8 \cdot X2$ $0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$	AA908	—	—
I1 L1 $0 \leq X0 \leq 0.8 \cdot X2$ $0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$	—	AA909	AA909
I2 L2 $0 \leq X0 \leq 0.8 \cdot X2$ $0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$	—	AA910	AA910
I3 L3 $0 \leq X0 \leq 0.8 \cdot X2$ $0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$	—	AA911	AA911
P System $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.3 \cdot X2 / Sr \leq 1.5$	AA912	AA912	AA912
P1 L1 $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.1 \cdot X2 / Sr \leq 0.5$	—	—	AA913
P2 L2 $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.1 \cdot X2 / Sr \leq 0.5$	—	—	AA914
P3 L3 $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.1 \cdot X2 / Sr \leq 0.5$	—	—	AA915
Q System $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.3 \cdot X2 / Sr \leq 1.5$	AA916	AA916	AA916
Q1 L1 $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.1 \cdot X2 / Sr \leq 0.5$	—	—	AA917
Q1 L2 $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.1 \cdot X2 / Sr \leq 0.5$	—	—	AA918
Q3 L3 $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.1 \cdot X2 / Sr \leq 0.5$	—	—	AA919
PF System $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	AA920	AA920	AA920
PF1 L1 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA921
PF2 L2 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA922
PF3 L3 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA923
QF System $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	AA924	AA924	AA924
QF1 L1 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA925
QF2 L2 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA926
QF3 L3 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA927
F $15.3 \text{ Hz} \leq X0 \leq X2 - 1 \text{ Hz}$ $X0 + 1 \text{ Hz} \leq X2 \leq 65 \text{ Hz}$	AA928	AA928	AA928
S System $0 \leq X0 \leq 0.8 \cdot X2$ $0.3 \leq X2 / Sr \leq 1.5$	AA929	AA929	AA929
S1 L1 $0 \leq X0 \leq 0.8 \cdot X2$ $0.1 \leq X2 / Sr \leq 0.5$	—	—	AA930
S2 L2 $0 \leq X0 \leq 0.8 \cdot X2$ $0.1 \leq X2 / Sr \leq 0.5$	—	—	AA931
S3 L3 $0 \leq X0 \leq 0.8 \cdot X2$ $0.1 \leq X2 / Sr \leq 0.5$	—	—	AA932
IM System $0 \leq X0 \leq 0.8 \cdot X2$ $0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$	—	AA933	AA933
IMS System $-X2 \leq X0 \leq 0.8 \cdot X2$ $0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$	—	AA934	AA934
LF System $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	AA935	AA935	AA935
LF1 L1 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA936
LF2 L2 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA937
LF3 L3 $-1 \leq X0 \leq (X2 - 0.5)$ $0 \leq X2 \leq 1$	—	—	AA938

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

DESCRIPTION	APPLICATION		
	A11... A16	A34	A24/A44
5. Measured variable, output A (continuation)			
Initial value X0			
Final value X2			
IB System X0 = 0 1 ≤ IBT ≤ 30 min 0.5 · Ir ≤ X2 ≤ 1.5 · Ir	AA939	—	—
IB1 L1 X0 = 0 1 ≤ IBT ≤ 30 min 0.5 · Ir ≤ X2 ≤ 1.5 · Ir	—	AA940	AA940
IB2 L2 X0 = 0 1 ≤ IBT ≤ 30 min 0.5 · Ir ≤ X2 ≤ 1.5 · Ir	—	AA941	AA941
IB3 L3 X0 = 0 1 ≤ IBT ≤ 30 min 0.5 · Ir ≤ X2 ≤ 1.5 · Ir	—	AA942	AA942
BS System X0 = 0 1 ≤ BST ≤ 30 min 0.5 · Ir ≤ X2 ≤ 1.5 · Ir	AA943	—	—
BS1 L1 X0 = 0 1 ≤ BST ≤ 30 min 0.5 · Ir ≤ X2 ≤ 1.5 · Ir	—	AA944	AA944
BS2 L2 X0 = 0 1 ≤ BST ≤ 30 min 0.5 · Ir ≤ X2 ≤ 1.5 · Ir	—	AA945	AA945
BS3 L3 X0 = 0 1 ≤ BST ≤ 30 min 0.5 · Ir ≤ X2 ≤ 1.5 · Ir	—	AA946	AA946
UM System 0 ≤ X0 ≤ 0.8 · X2 0.8 · Ur / √3 ≤ X2 ≤ 1.2 · Ur / √3	—	—	AA947
6. Output signal, output A			
Initial value Y0			
Final value Y2			
DC current Y0 = 0 Y2 = 20 mA	AB01	AB01	AB01
– Y2 ≤ Y0 ≤ 0.2 · Y2 1 mA ≤ Y2 ≤ 20 mA	AB91	AB91	AB91
DC voltage – Y2 ≤ Y0 ≤ 0.2 · Y2 1 V ≤ Y2 ≤ 10 V	AB92	AB92	AB92
7. Characteristic, output A			
Linear	AC01	AC01	AC01
Bent (X0 + 0.015 · X2) ≤ X1 ≤ 0.985 · X2 Y0 ≤ Y1 ≤ Y2	AC91	AC91	AC91
8. Limits, output A			
Standard Ymin = Y0 – 0.25 Y2 Ymax = 1.25 Y2	AD01	AD01	AD01
(Y0 – 0.25 Y2) ≤ Ymin ≤ Y0 Y2 ≤ Ymax ≤ 1.25 Y2	AD91	AD91	AD91
9. Measured variable, output B			
Same as output A, but markings start with a capital B	BA ...	BA ...	BA ...
10. Output signal, output B			
Same as output A, but markings start with a capital B	BB ..	BB ..	BB ..
11. Characteristic, output B			
Same as output A, but markings start with a capital B	BC ..	BC ..	BC ..
12. Limits, output B			
Same as output A, but markings start with a capital B	BD ..	BD ..	BD ..
13. Measured variable, output C			
Same as output A, but markings start with a capital C	CA ...	CA ...	CA ...
14. Output signal, output C			
Same as output A, but markings start with a capital C	CB ..	CB ..	CB ..
15. Characteristic, output C			
Same as output A, but markings start with a capital C	CC ..	CC ..	CC ..
16. Limits, output C			
Same as output A, but markings start with a capital C	CD ..	CD ..	CD ..
17. Measured variable, output D			
Same as output A, but markings start with a capital D	DA ..	DA ..	DA ..
18. Output signal, output D			
Same as output A, but markings start with a capital D	DB ..	DB ..	DB ..

EURAX DME 440 with RS 485 interface


Programmable Multi-Transducer

DESCRIPTION	APPLICATION		
	A11... A16	A34	A24/A44
19. Characteristic, output D Same as output A, but markings start with a capital D	DC ..	DC ..	DC ..
20. Limits, output D Same as output A, but markings start with a capital D	DD ..	DD ..	DD ..
21. Energy meter 1 Not used	EA00	EA00	EA00
I System [Ah]	EA50	—	—
I1 L1 [Ah]	—	EA51	EA51
I2 L2 [Ah]	—	EA52	EA52
I3 L3 [Ah]	—	EA53	EA53
S System [VAh]	EA54	EA54	EA54
S1 L1 [VAh]	—	—	EA55
S2 L2 [VAh]	—	—	EA56
S3 L3 [VAh]	—	—	EA57
P System (incoming) [Wh]	EA58	EA58	EA58
P1 L1 (incoming) [Wh]	—	—	EA59
P2 L2 (incoming) [Wh]	—	—	EA60
P3 L3 (incoming) [Wh]	—	—	EA61
Q System (inductive) [Varh]	EA62	EA62	EA62
Q1 L1 (inductive) [Varh]	—	—	EA63
Q2 L2 (inductive) [Varh]	—	—	EA64
Q3 L3 (inductive) [Varh]	—	—	EA65
P System (outgoing) [Wh]	EA66	EA66	EA66
P1 L1 (outgoing) [Wh]	—	—	EA67
P2 L2 (outgoing) [Wh]	—	—	EA68
P3 L3 (outgoing) [Wh]	—	—	EA69
Q System (capacitive) [Varh]	EA70	EA70	EA70
Q1 L1 (capacitive) [Varh]	—	—	EA71
Q2 L2 (capacitive) [Varh]	—	—	EA72
Q3 L3 (capacitive) [Varh]	—	—	EA73
22. Energy meter 2 Same as energy meter 1, but markings start with a capital F	FA ..	FA ..	FA ..
23. Energy meter 3 Same as energy meter 1, but markings start with a capital G	GA ..	GA ..	GA ..
24. Energy meter 4 Same as energy meter 1, but markings start with a capital H	HA ..	HA ..	HA ..

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer




Electrical connections

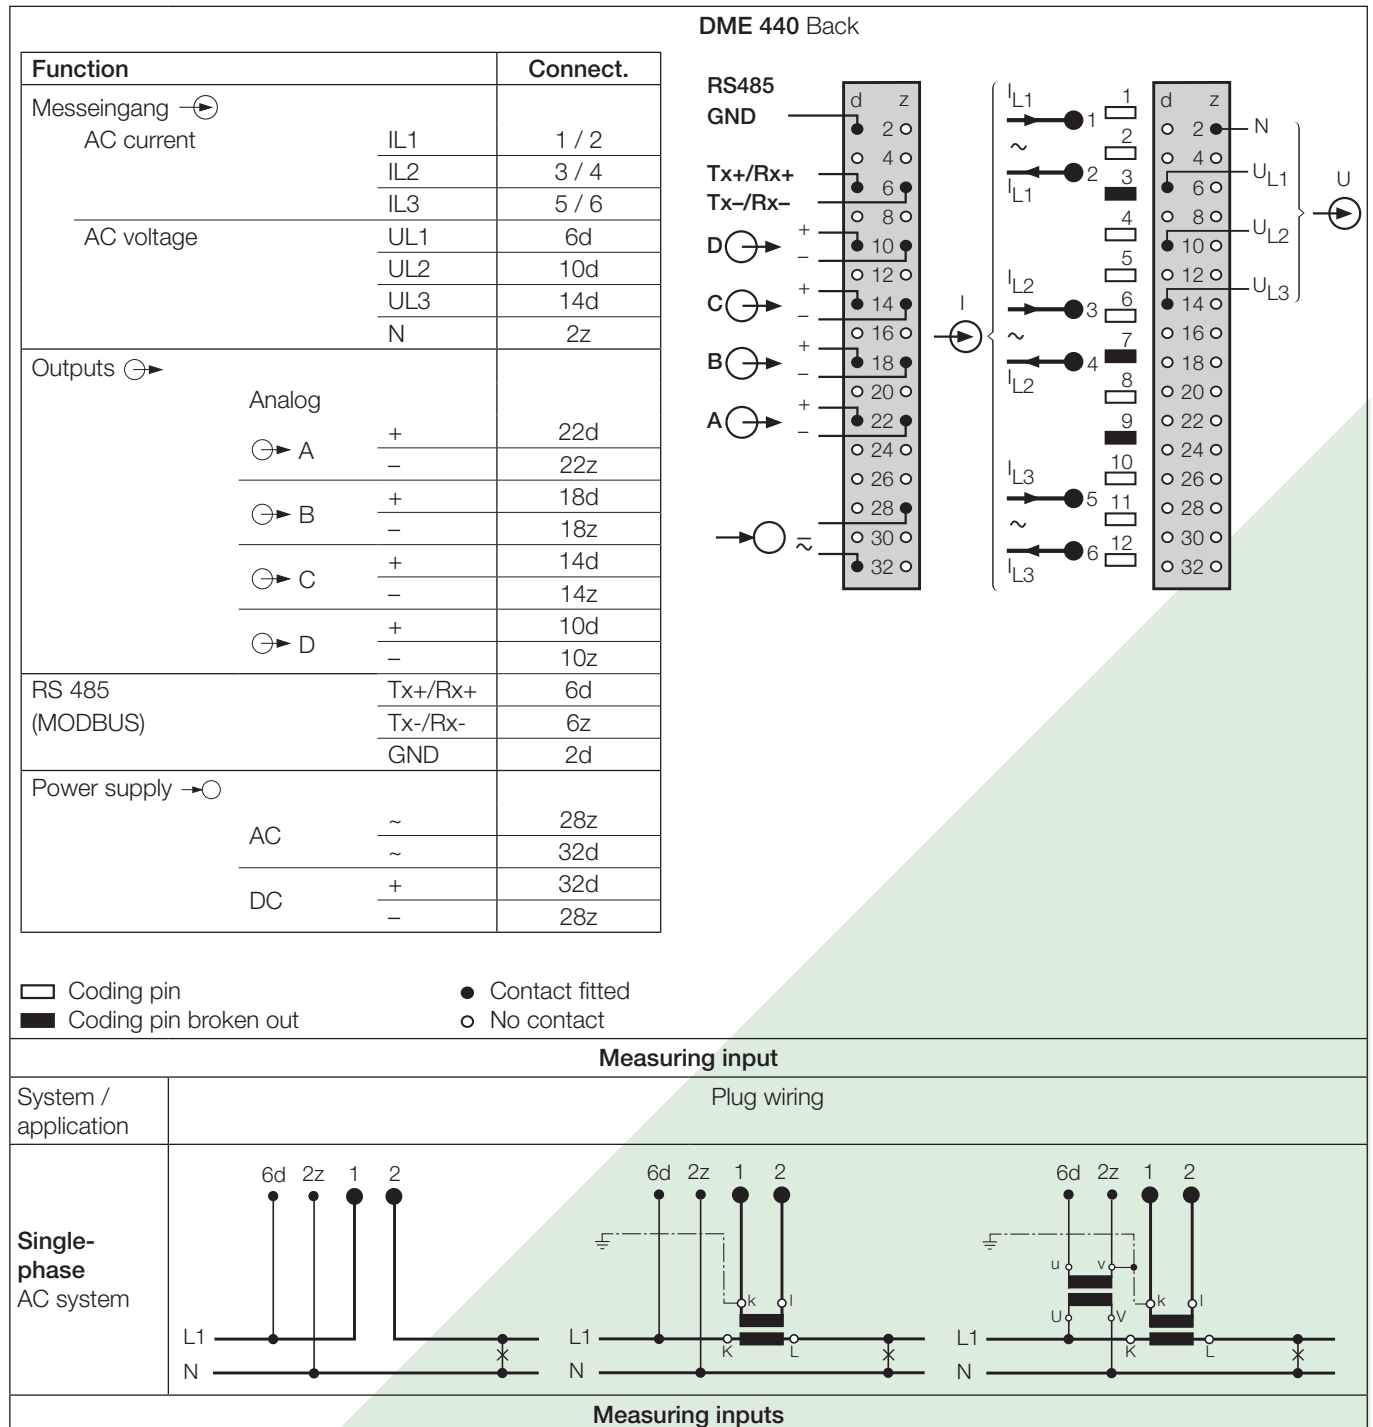

Continuation of "Electrical connections" see on next page!

EURAX DME 440 with RS 485 interface





Programmable Multi-Transducer

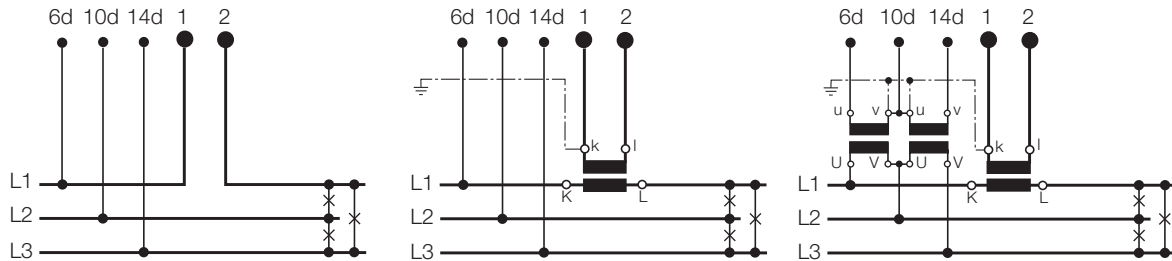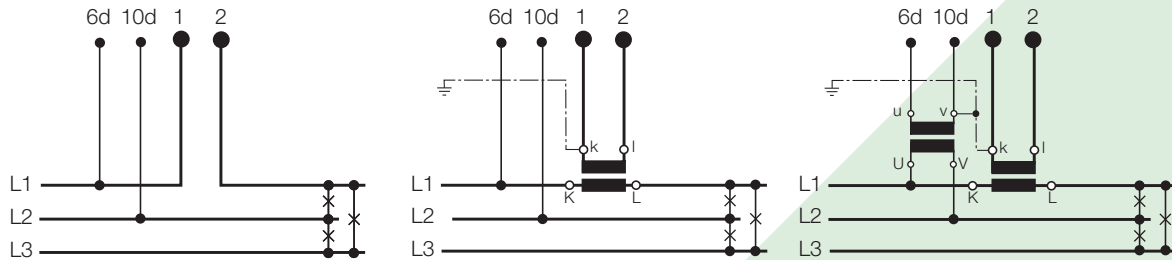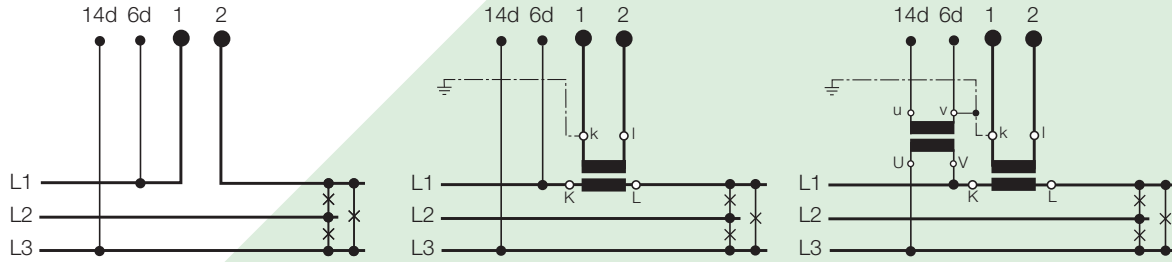System / application	Plug wiring																		
3-wire 3-phase symmetric load I: L1	 Connect the voltage according to the following table for current measurement in L2 or L3: <table><tr><th>Current transformer</th><th colspan="2">Connections</th><th>6d</th><th>10d</th><th>14d</th></tr><tr><td>L2</td><td>1</td><td>2</td><td>L2</td><td>L3</td><td>L1</td></tr><tr><td>L3</td><td>1</td><td>2</td><td>L3</td><td>L1</td><td>L2</td></tr></table>	Current transformer	Connections		6d	10d	14d	L2	1	2	L2	L3	L1	L3	1	2	L3	L1	L2
Current transformer	Connections		6d	10d	14d														
L2	1	2	L2	L3	L1														
L3	1	2	L3	L1	L2														
3-wire 3-phase symmetric load phase-shift U: L1 – L2 I: L1	 Connect the voltage according to the following table for current measurement in L2 or L3: <table><tr><th>Current transformer</th><th colspan="2">Connections</th><th>6d</th><th>10d</th></tr><tr><td>L2</td><td>1</td><td>2</td><td>L2</td><td>L3</td></tr><tr><td>L3</td><td>1</td><td>2</td><td>L3</td><td>L1</td></tr></table>	Current transformer	Connections		6d	10d	L2	1	2	L2	L3	L3	1	2	L3	L1			
Current transformer	Connections		6d	10d															
L2	1	2	L2	L3															
L3	1	2	L3	L1															
3-wire 3-phase symmetric load phase-shift U: L3 – L1 I: L1	 Connect the voltage according to the following table for current measurement in L2 or L3: <table><tr><th>Current transformer</th><th colspan="2">Connections</th><th>14d</th><th>6d</th></tr><tr><td>L2</td><td>1</td><td>2</td><td>L1</td><td>L2</td></tr><tr><td>L3</td><td>1</td><td>2</td><td>L2</td><td>L3</td></tr></table>	Current transformer	Connections		14d	6d	L2	1	2	L1	L2	L3	1	2	L2	L3			
Current transformer	Connections		14d	6d															
L2	1	2	L1	L2															
L3	1	2	L2	L3															

Continuation of “Electrical connections” see on next page!

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

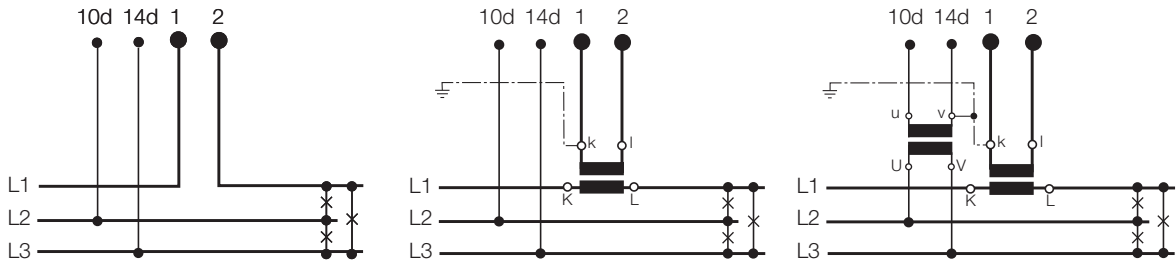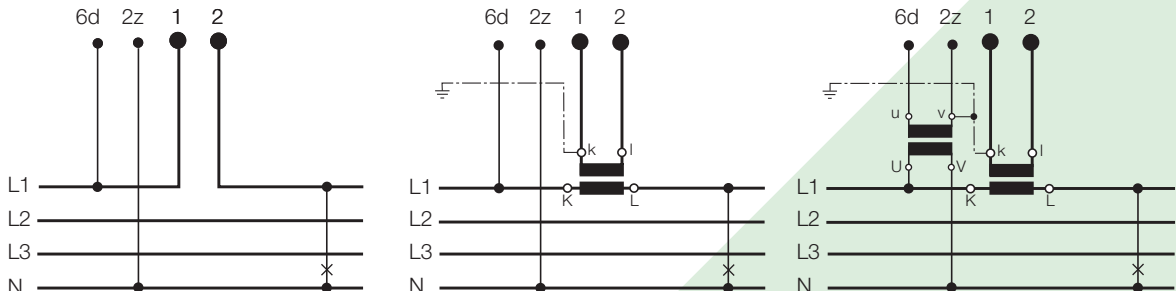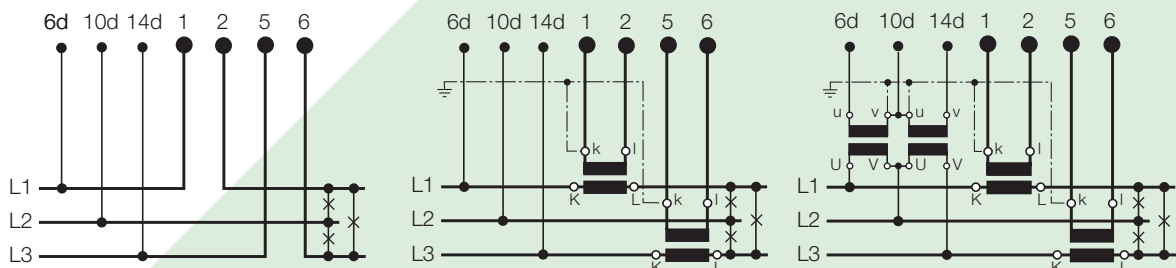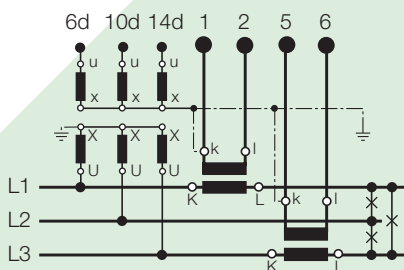Measuring inputs																			
System / application	Plug wiring																		
3-wire 3-phase symmetric load phase-shift U: L2 – L3 I: L1																			
	Connect the voltage according to the following table for current measurement in L2 or L3:																		
	<table><tr><th>Current transformer</th><th colspan="2">Connections</th><th>10d</th><th>14d</th></tr><tr><td>L2</td><td>1</td><td>2</td><td>L3</td><td>L1</td></tr><tr><td>L3</td><td>1</td><td>2</td><td>L1</td><td>L2</td></tr></table>					Current transformer	Connections		10d	14d	L2	1	2	L3	L1	L3	1	2	L1
Current transformer	Connections		10d	14d															
L2	1	2	L3	L1															
L3	1	2	L1	L2															
4-wire 3-phase symmetric load I: L1																			
	Connect the voltage according to the following table for current measurement in L2 or L3:																		
	<table><tr><th>Current transformer</th><th colspan="2">Connections</th><th>6d</th><th>2z</th></tr><tr><td>L2</td><td>1</td><td>2</td><td>L2</td><td>N</td></tr><tr><td>L3</td><td>1</td><td>2</td><td>L3</td><td>N</td></tr></table>					Current transformer	Connections		6d	2z	L2	1	2	L2	N	L3	1	2	L3
Current transformer	Connections		6d	2z															
L2	1	2	L2	N															
L3	1	2	L3	N															
3-wire 3-phase asymmetric load																			
																			

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

Measuring inputs	
System / application	Plug wiring
4-wire 3-phase asymmetric load	
	3 single-pole insulated voltage transformers in high-voltage system
4-wire 3-phase asymmetric load, Open-Y-connection	Low-voltage system
	3 single-pole insulated voltage transformers in high-voltage system

Relationship between PF, QF and LF

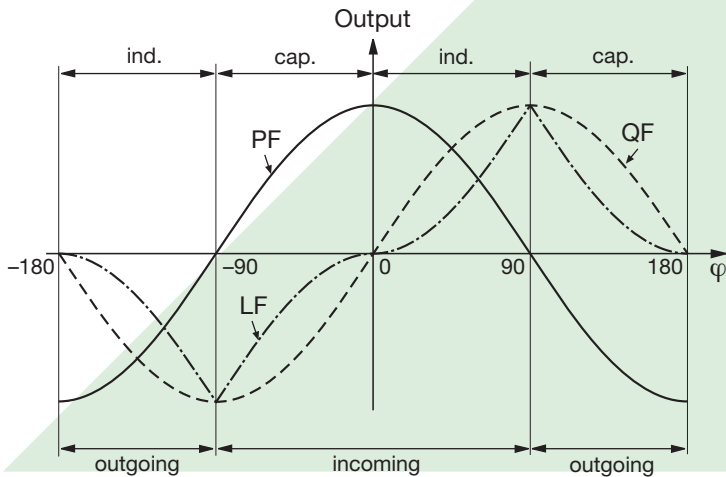


Fig. 5. Active power PF —, reactive power QF -----, power factor LF - - - - -.

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

Connecting devices to the bus

The RS 485 interface of the DME 440 is galvanically isolated from all other circuits. For an optimal data transmission the devices are connected via a 3-wire cable, consisting of a twisted pair cable (for data lines) and a shield. There is no termination required. A shield both prevents the coupling of external noise to the bus and limits emissions from the bus. The shield must be connected to solid ground.

You can connect up to 32 members to the bus (including master). Basically devices of different manufacturers can be connected to the bus, if they use the standard MODBUS® protocol. Devices without galvanically isolated bus interface are not allowed to be connected to the shield.

The optimal topology for the bus is the daisy chain connection from node 1 to node 2 to node n. The bus must form a single continuous path, and the nodes in the middle of the bus must have short stubs. Longer stubs would have a negative impact on signal quality (reflexion at the end). A star or even ring topology is not allowed.

There is no bus termination required due to low data rate. If you got problems when using long cables you can terminate the bus at both ends with the characteristic impedance of the cable (normally about 120 Ω). Interface converters RS232 $\leftrightarrow$ RS485 or RS485 interface cards often have a built-in termination network which can be connected to the bus. The second impedance then can be connected directly between the bus terminals of the device far most.

Fig. 6 shows the connection of transducers DME 440 to the MODBUS. The RS485 interface can be realized by means of PC built-in interface cards or interface converters. Both is shown using i.e. the interfaces "13601" and "86201" of W & T (Wiesemann & Theis GmbH). They are configured for a 2-wire application with automatic control of data direction. These interfaces provide a galvanical isolation and a built-in termination network.

Important:

- Each device connected to the bus must have a unique address
- All devices must be adjusted to the same baudrate.

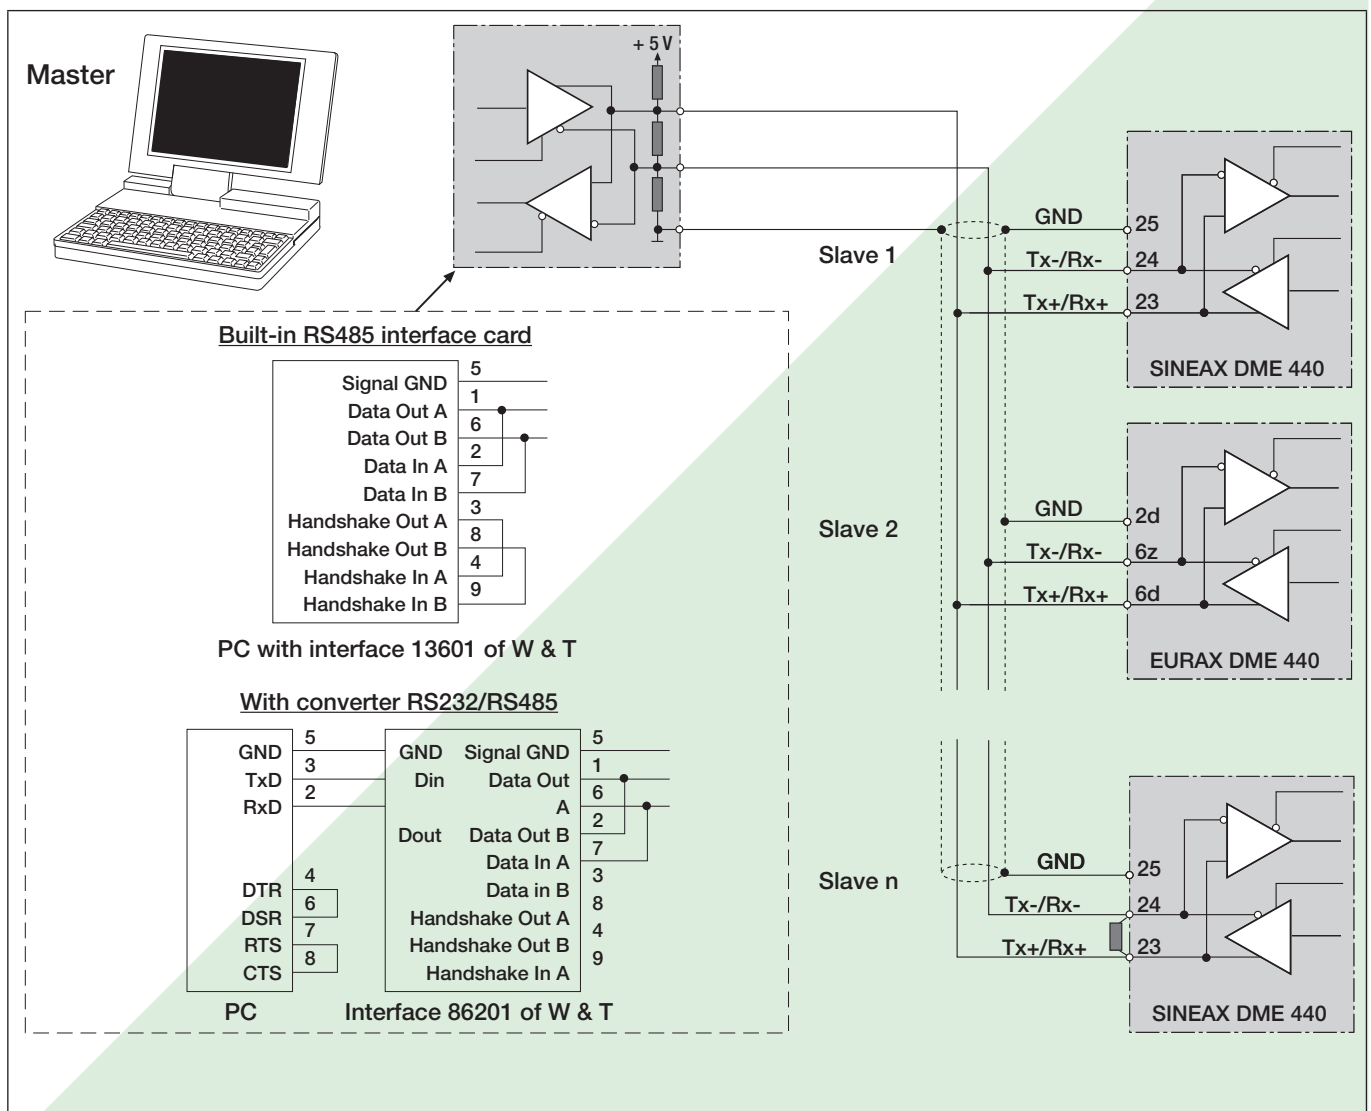


Fig. 6

EURAX DME 440 with RS 485 interface

Programmable Multi-Transducer

Dimensional drawing

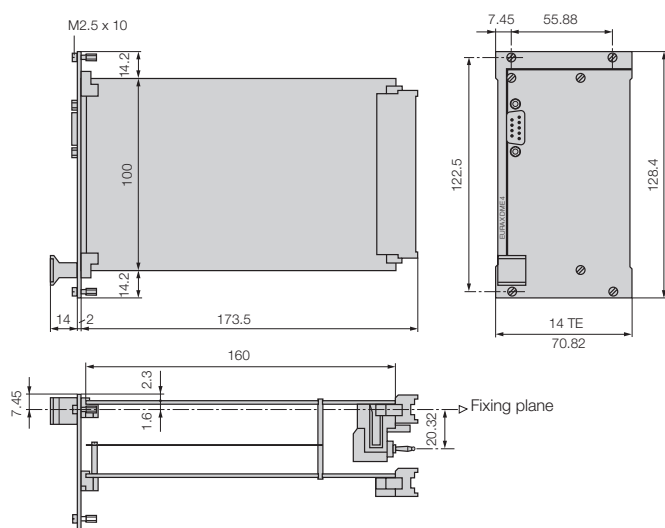


Fig. 7. EURAX DME 440, front plate width 14 TE.

Standard accessories

- 1 Operating Instructions for EURAX DME 440 in three languages: German, French, English
- 1 blank type label, for recording programmed settings
- 1 Interface definition DME 440: German, French or English

Table 4: Accessories

Description	Order No.
Programming cable	980 179
Configuration software DME 4 for SINEAX/EURAX DME 424, 440, 442, SINEAX DME 400, 401 and 406 Windows 3.1x, 95, 98, NT and 2000 on CD in German, English, French, Italian and Dutch (download free of charge under http://www.gmc-instruments.com In addition, the CD contains all configuration programmes presently available for Camille Bauer products.	146 557
Set for incorporation (incl. 1 coding strip, 3 coding pegs and 8 screws) LV edge connector plug and heavy current edge connector socket for mounting in 19" rack GTU 0509 resp. EURAX BT 901 LV edge connector plug with wire-wrap posts, heavy current edge connector plug with 0.5 m cable	138 885
LV edge connector plug with soldering posts, heavy current edge connector plug with 0,5 m cable	138 869
Operating Instructions DME 440-2 B d-f-e	127 193

Version with GTU front plate to order acc. to NLB 876.



CAMILLE BAUER

Rely on us.

Camille Bauer Ltd
 Aargauerstrasse 7
 CH-5610 Wohlen / Switzerland

Phone: +41 56 618 21 11

Fax: +41 56 618 35 35

info@camillebauer.com

www.camillebauer.com

Appendix: PROGRAMMING FOR EURAX TYPE DME 440



with 4 analog outputs and bus interface RS 485 (MODBUS ®)
(see Data Sheet DME 440-2 Le, Table 3: "Programming")

Customer / Agent: _____	Date: _____
Order No. / Item: _____	Delivery date: _____
No of instruments: _____	
Type of instruments (marking): _____	

Codes for features 1 to 24:

Features 1 to 24 concern data for configuring the software.

1. Application			
A	System: _____		
2. Rated input voltage, rated value			
U	Ur = _____		
3. Rated input current, rated value			
V	Ir = _____		
4. Primary rating			
W	VT = _____ kV CT = _____ A Specify transformer ratio primary, e.g. 33 kV, 1000 A The secondary ratings must correspond to the rated input voltage and current specified for feature 2, respectively 3.		
Output A			
A A	5. Measured variable Type: _____	X0 = _____	X2 = _____
A B	6. Output signal	Y0 = _____	Y2 = _____
A C	7. Characteristic linear/bent	X1 = _____	Y1 = _____
A D	8. Limits	Standard / Ymin = _____	Ymax = _____
Output B			
B A	9. Measured variable Type: _____	X0 = _____	X2 = _____
B B	10. Output signal	Y0 = _____	Y2 = _____
B C	11. Characteristic linear/bent	X1 = _____	Y1 = _____
B D	12. Limits	Standard / Ymin = _____	Ymax = _____

Continuation on next page!

Output C								
C	A				13. Measured variable	Type: _____	X0 = _____	X2 = _____
C	B				14. Output signal		Y0 = _____	Y2 = _____
C	C				15. Characteristic linear/bent		X1 = _____	Y1 = _____
C	D				16. Limits		Standard / Ymin = _____	Ymax = _____
Output D								
D	A				17. Measured variable	Type: _____	X0 = _____	X2 = _____
D	B				18. Output signal		Y0 = _____	Y2 = _____
D	C				19. Characteristic linear/bent		X1 = _____	Y1 = _____
D	D				20. Limits		Standard / Ymin = _____	Ymax = _____
E	A				21. Energy meter 1			
F	A				22. Energy meter 2			
G	A				21. Energy meter 3			
H	A				21. Energy meter 4			